

# ***emulator***

***Laser Simulator System***

***User Manual***

**High End Systems, Inc.  
2217 West Braker Lane  
Austin, Texas U.S.A.**

*emulator* Laser Simulator System User Manual  
Version 2.0, August 1993

P/N 60600003

# Contents

<b>Introduction</b> .....	Intro-1
About This Manual .....	Intro-2
Caution and Warning Symbols .....	Intro-3
Getting Help .....	Intro-3
<b>Chapter 1</b>	
<b>Site Planning and Precautions</b> .....	1-1
Power Requirements .....	1-1
<i>emulator</i> Fixture .....	1-1
<i>emulator</i> Controller .....	1-2
Data Cable Requirements .....	1-2
Additional Hardware .....	1-3
Precautions .....	1-3
Warnings: .....	1-3
Cautions: .....	1-4
<b>Chapter 2</b>	
<b><i>emulator</i> Fixture Set Up and Assembly</b> .....	2-1
Unpacking the <i>emulator</i> System .....	2-1
Saving the Shipping Materials .....	2-1
Inspecting the Contents .....	2-1
Setting the <i>emulator</i> Fixture Voltage .....	2-3
Assembling the <i>emulator</i> Fixture .....	2-6
Attaching the Yoke .....	2-6
Installing the Xenon Lamp .....	2-8
The Optimization Process: Why It Makes a Big Difference .....	2-10
Optimizing the <i>emulator</i> Fixture .....	2-11
Setting <i>emulator</i> Fixture Personality DIP Switches .....	2-16
Setting <i>emulator</i> Fixture Address DIP Switches .....	2-19
<b>Chapter 3</b>	
<b><i>emulator</i> Controller Set Up and Review</b> .....	3-1
Setting <i>emulator</i> Controller Voltage and Frequency .....	3-1
Setting <i>emulator</i> Controller Voltage .....	3-1
Setting <i>emulator</i> Controller Frequency .....	3-2
Review of the <i>emulator</i> Controller .....	3-3
Front Panel Descriptions .....	3-3
User Programmable Keys .....	3-11
Selecting Constructs from the LCD Window .....	3-13
Rear Panel Descriptions .....	3-15
Configuring the <i>emulator</i> Controller DIP Switches .....	3-19

## Chapter 4

<b>Connecting Data Cables</b> .....	4-1
Data Cable Connections: General Information.....	4-1
Daisy Chain Method of Connecting the Data Cables .....	4-2
Serial Data Distributor Method.....	4-3
Master/Slave Configuration .....	4-3
Connect one or more controllers in Slave Mode .....	4-4
Programming a system in the Master/Slave Configuration .....	4-5
MIDI In and Out ports .....	4-6

## Chapter 5

<b>Operating the System</b> .....	5-1
Initial Power Up.....	5-1
Homing Fixtures from the emulator Controller.....	5-2
emulator Controller Top Level Modes .....	5-3
Menu Mode.....	5-3
How to get around in Menu Mode.....	5-3
Using Menu Mode Submenus.....	5-5
Help.....	5-5
Backup .....	5-6
Submasters .....	5-6
Assign a Channel for Master Dim .....	5-8
Assign Fixtures to a Submaster .....	5-9
Setup .....	5-10
Set Device ID.....	5-10
Set Memory Locks.....	5-11
Serial Port .....	5-11
Edit/Copy .....	5-12
Erase All .....	5-13
Erase User Keys.....	5-14
Programming .....	5-15
Address Mode Programming .....	5-16
The Four-Step Method to Create a Page.....	5-16
Selecting a Range of Addresses.....	5-17
Editing Construct Parameters .....	5-17
Creating and Running Loops .....	5-18
Creating a Non-Initialized Page.....	5-18
Running a Loop .....	5-19
Position Memory (Position Preset).....	5-20
Creating Position Reference Pages in Memory 6 .....	5-20
Using the Position Reference Pages in Memory 6 .....	5-21
Address Lockout (Fixture Exclusion).....	5-21
Address Unlock.....	5-22
Preset Mode Programming .....	5-22
Recording A One Page Preset (Scene) .....	5-22
Recording A Sequence (Loop or Chase) as a Preset .....	5-23

Programming a Preset in Twelve Level Preset Access Mode ..	5-24
Recalling a Preset in Twelve Level Preset Access Mode .....	5-25
Programming a Preset in Binary Preset Access Mode .....	5-25
Recalling a Preset in Binary Preset Access Mode .....	5-26
User Definable Keys 1 Through 8 .....	5-26
User Key States.....	5-26
Playback User Key Macros.....	5-27
Edit User Keys .....	5-27
Abort Playing Macro (From Edit Menu) .....	5-27
Playback Macros (From Edit Menu) .....	5-28
Record User Key Macros.....	5-28
Activate Random, Audio, and Effects Functions .....	5-29
Copying.....	5-29
Page Copy .....	5-30
Block Copy .....	5-30
Address Parameter Copy .....	5-31
Copy Construct Parameters From One Address to Another Address on the Same Page.....	5-31
Copy Selected Addresses From One Page to Another Page.....	5-32
Editing Pages .....	5-32
Erasing Pages and Creating Blackout Pages.....	5-33
Memory Lock/Unlock.....	5-34
Playback.....	5-35
Page Playback - Manual Advance .....	5-35
Page Playback - Auto Mode .....	5-36
Live Control of Fixtures During Auto Playback .....	5-36
Audio Input Playback Modes .....	5-37
Preset Playback .....	5-38
Automatic All-Memory Playback.....	5-39
Controller Address Monitoring.....	5-39
Master Dim .....	5-40

## Chapter 6

<b>Remote Access and Control .....</b>	<b>6-1</b>
Remote Analog Access .....	6-1
Remote Page Access .....	6-3
Remote Preset Access .....	6-4
Twelve Level Preset Access .....	6-4
Binary Preset Access .....	6-5
Preset Playback from a Computer .....	6-6
Remote Enable.....	6-6

## Chapter 7

<b>External Memory Storage and Transfer .....</b>	<b>7-1</b>
General Information.....	7-1
Using a Memory Card to Replace the Operating System (O/S) .....	7-2

Updating the O/S .....	7-2
Replacing a Deleted O/S from a Memory Card.....	7-3
Backup User RAM to Memory Card.....	7-4
Save Controller User RAM to Memory Card.....	7-4
Load User RAM from Memory Card to Controller.....	7-5
Transfer Controller O/S to Memory Card.....	7-6
Transfer Memory Card O/S to Controller.....	7-7
Backup User RAM to a Personal Computer.....	7-8
Memory Transfers Involving Locked Memories.....	7-9
Set Up for Computer Memory Transfers.....	7-9
Downloading Memory (Controller to Computer).....	7-10
Uploading Memory (Computer to Controller).....	7-13
Crossloading Between Controllers .....	7-16
Backing Up Lightwave Controllers with an Macintosh® Computer ...	7-17
White Knight Back Up Procedure .....	7-17

## Chapter 8

<b>General Maintenance and Troubleshooting .....</b>	<b>8-1</b>
General Maintenance and Cleaning .....	8-1
Cleaning the Outer Surfaces .....	8-1
Cleaning the Internal Components .....	8-1
Cleaning Stepper Motors, Galvanometers, and Shutter.....	8-2
Cleaning the Color Wheel.....	8-3
Cleaning the Optical Sensor .....	8-4
Cleaning the Emission Window .....	8-4
Cleaning the Mirrors .....	8-5
Replacing Parts .....	8-6
Xenon Lamp Maintenance.....	8-6
Xenon Lamp Aging .....	8-6
Disposing of the Xenon Lamp.....	8-7
Replacing the Color Wheel.....	8-7
Replacing the Color Wheel Sensor.....	8-7
System Troubleshooting .....	8-10
Symptom: Unit will not power up .....	8-11
Symptom: Lamp will not ignite/strike .....	8-11
Symptom: Fixture will not respond to data .....	8-12
Symptom: Low output from lamp .....	8-12
Contact your Dealer/Distributor for assistance with these: .....	8-12
Problems that can be fixed by replacing fuses.....	8-13
Problems that can be fixed by replacing the EPROM .....	8-13

## Chapter 9

<b>Warranty Information.....</b>	<b>9-1</b>
Limited Warranty.....	9-1
Returning an Item Under Warranty for Repair.....	9-1

<b>Appendix A</b>	
<b><i>emulator</i> Fixture Specifications .....</b>	<b>A-1</b>
<b>Appendix B</b>	
<b><i>emulator</i> Fixture Illustrations .....</b>	<b>B-1</b>
<i>emulator</i> Fixture Top View .....	B-1
<i>emulator</i> Fixture Side View .....	B-1
<i>emulator</i> Fixture Front View .....	B-2
<i>emulator</i> Fixture Rear View .....	B-2
<i>emulator</i> Fixture Interior View .....	B-3
<b>Appendix C</b>	
<b><i>emulator</i> Controller Specifications .....</b>	<b>C-1</b>
<b>Appendix D</b>	
<b><i>emulator</i> Controller Illustrations.....</b>	<b>D-1</b>
<i>emulator</i> Controller Front View .....	D-1
<i>emulator</i> Controller Rear View .....	D-2
<b>Appendix E</b>	
<b>Binary Access Table .....</b>	<b>E-1</b>

1. Introduction

2. Getting Started

3. Simulation Setup

4. Results and Discussion

5. Conclusion

6. Appendix

7. Bibliography

8. Index