

# *universal Controller*

## *User Manual*

High End Systems, Inc.  
2217 West Braker Lane  
Austin, Texas USA

*universal* Controller User Manual  
Version 2.0, November 1994

intellabeam<sup>®</sup> Automated Luminaire is a registered trademark of High End Systems, Inc.

emulator<sup>®</sup> Laser Simulator is a registered trademark of High End Systems, Inc.

trackspot<sup>®</sup> Automated Luminaire is a registered trademark of High End Systems, Inc.

universal<sup>™</sup> Lighting Controller is a trademark of High End Systems, Inc.

colorpro<sup>®</sup> Color Changing Fixture is a registered trademark of High End Systems, Inc.

# Contents

<b>Introduction</b> .....	Intro-1
Features .....	Intro-1
About This Manual .....	Intro-2
Caution and Warning Symbols and Labels.....	Intro-3
English .....	Intro-3
German.....	Intro-3
French .....	Intro-3
Spanish.....	Intro-4
Glossary .....	Intro-4
Getting Help.....	Intro-7
<b>Chapter 1</b>	
<b>Site Planning and Precautions</b> .....	1-1
Power Requirements .....	1-1
Data Cable Requirements .....	1-1
Additional Hardware.....	1-2
Special Note Regarding trackspots .....	1-2
<b>Chapter 2</b>	
<b>universal Controller Review</b> .....	2-1
Front Panel Descriptions.....	2-1
Rear Panel Descriptions .....	2-6
Programming Constructs .....	2-7
Programming Overview.....	2-7
Construct Descriptions.....	2-8
Color .....	2-8
Delay .....	2-9
Dim .....	2-9
Gate .....	2-9
Position .....	2-9
Speed.....	2-10
Xfade.....	2-10
Cspeed (Color Speed) .....	2-11
Gspeed (Gobo Speed) .....	2-11
Gobo.....	2-11
Iris .....	2-12
Program.....	2-12
Rotate .....	2-12
X-scale/Y-scale .....	2-12
Scan.....	2-12
X-function .....	2-12
Y-function .....	2-13
XY sync .....	2-13

User Programmable Keys .....	2-13
Advance Keys ( Audio) .....	2-13
Effect Keys .....	2-14

### Chapter 3

<b>Connecting System Cables</b> .....	3-1
Data Cable Connections.....	3-1
Daisy Chain Method of Connecting the Data Cables .....	3-2
Serial Data Distributor Method.....	3-3
Master/Slave Configuration .....	3-3
Connect one or more controllers in Slave Mode .....	3-5
Programming a system in the Master/Slave Configuration .....	3-6
MIDI In and Out ports .....	3-6
Remote Enable .....	3-6
Audio Input .....	3-8

### Chapter 4

<b>Operating the universal Controller</b> .....	4-1
Procedures:.....	4-1
Initial Power Up.....	4-2
Before You Turn on the Controller.....	4-2
Turning On the Controller .....	4-2
universal Controller Ready Mode.....	4-3
Menu Mode.....	4-4
Home.....	4-6
Backup .....	4-6
Setup .....	4-9
MIDI .....	4-9
Fixture.....	4-10
LCD .....	4-13
Erase Memory .....	4-14
Help Function .....	4-16
Programming .....	4-17
Address Mode Programming .....	4-17
Defining Fixture Types .....	4-17
Create or Edit a Single Page .....	4-18
Create a Loop of Pages .....	4-21
Create a Loop.....	4-21
Create an Uninitialized Page.....	4-21
Creating Position Memories .....	4-23
Copy .....	4-25
Page Copy .....	4-25
Block Copy .....	4-27
Position [and/or Construct] Copy .....	4-30
Parameter Copy (Same Page) .....	4-32
Address Copy (not found in menu display).....	4-35

Effects .....	4-36
Allmem .....	4-37
Remote .....	4-38
Page Lock .....	4-39
POSMEM (Position Memory Edit) .....	4-41
Hot Key Sequences .....	4-42
Parameter Copy (to Different Page) .....	4-43
Address Mode Advanced Programming Features .....	4-44
Preset Mode Programming .....	4-45
Create a Single Page Preset .....	4-46
Create a Loop (Chase) as a Preset .....	4-48
User Definable Keys .....	4-52
USER Key States .....	4-52
Playback User Key Macros .....	4-52
Edit User Keys .....	4-53
Abort Playing Macro .....	4-53
Playback Macros .....	4-54
Record User Key Macros .....	4-54
Activate Delay, Step, Pause, and Effects Functions .....	4-56
Erase User Definable Keys (Restore) .....	4-56
Playback .....	4-58
Playback a Single Page .....	4-59
Playback a Loop of Pages .....	4-60
Playback with Audio Advance .....	4-62
Step on Beat Audio Advance .....	4-62
Pause on Beat Audio Advance .....	4-64
Playback with Effects .....	4-66
Color Modulate .....	4-66
Gobo Modulate (intellabeam and trackspot) .....	4-66
Size Modulate (emulator) .....	4-67
Dim Modulate (intellabeam, trackspot and emulator) .....	4-68
Playback a Preset .....	4-68
Erase a Page and Create a Blackout Page .....	4-69
Erase Selected Fixtures on a Page .....	4-71
Erase a Preset .....	4-72
Lockout a Fixture (Fixture Exclusion) .....	4-73
Unlock a Fixture .....	4-73
Using the Position Memory (Preset Focus) as Position Reference .....	4-74
Master Dim .....	4-75

## Chapter 5

<b>Warranty Information</b> .....	5-1
Unpacking and Saving the Shipping Materials .....	5-1
Inspecting the Contents .....	5-1
Limited Warranty .....	5-1
Returning an Item Under Warranty for Repair .....	5-2

- 41-A.....
- 42-A.....
- 43-A.....
- 44-A.....
- 45-A.....
- 46-A.....
- 47-A.....
- 48-A.....
- 49-A.....
- 50-A.....
- 51-A.....
- 52-A.....
- 53-A.....
- 54-A.....
- 55-A.....
- 56-A.....
- 57-A.....
- 58-A.....
- 59-A.....
- 60-A.....
- 61-A.....
- 62-A.....
- 63-A.....
- 64-A.....
- 65-A.....
- 66-A.....
- 67-A.....
- 68-A.....
- 69-A.....
- 70-A.....
- 71-A.....
- 72-A.....
- 73-A.....
- 74-A.....
- 75-A.....
- 76-A.....
- 77-A.....
- 78-A.....
- 79-A.....
- 80-A.....
- 81-A.....
- 82-A.....
- 83-A.....
- 84-A.....
- 85-A.....
- 86-A.....
- 87-A.....
- 88-A.....
- 89-A.....
- 90-A.....
- 91-A.....
- 92-A.....
- 93-A.....
- 94-A.....
- 95-A.....
- 96-A.....
- 97-A.....
- 98-A.....
- 99-A.....
- 100-A.....
- 101-A.....
- 102-A.....
- 103-A.....
- 104-A.....
- 105-A.....
- 106-A.....
- 107-A.....
- 108-A.....
- 109-A.....
- 110-A.....
- 111-A.....
- 112-A.....
- 113-A.....
- 114-A.....
- 115-A.....
- 116-A.....
- 117-A.....
- 118-A.....
- 119-A.....
- 120-A.....
- 121-A.....
- 122-A.....
- 123-A.....
- 124-A.....
- 125-A.....
- 126-A.....
- 127-A.....
- 128-A.....
- 129-A.....
- 130-A.....
- 131-A.....
- 132-A.....
- 133-A.....
- 134-A.....
- 135-A.....
- 136-A.....
- 137-A.....
- 138-A.....
- 139-A.....
- 140-A.....
- 141-A.....
- 142-A.....
- 143-A.....
- 144-A.....
- 145-A.....
- 146-A.....
- 147-A.....
- 148-A.....
- 149-A.....
- 150-A.....
- 151-A.....
- 152-A.....
- 153-A.....
- 154-A.....
- 155-A.....
- 156-A.....
- 157-A.....
- 158-A.....
- 159-A.....
- 160-A.....
- 161-A.....
- 162-A.....
- 163-A.....
- 164-A.....
- 165-A.....
- 166-A.....
- 167-A.....
- 168-A.....
- 169-A.....
- 170-A.....
- 171-A.....
- 172-A.....
- 173-A.....
- 174-A.....
- 175-A.....
- 176-A.....
- 177-A.....
- 178-A.....
- 179-A.....
- 180-A.....
- 181-A.....
- 182-A.....
- 183-A.....
- 184-A.....
- 185-A.....
- 186-A.....
- 187-A.....
- 188-A.....
- 189-A.....
- 190-A.....
- 191-A.....
- 192-A.....
- 193-A.....
- 194-A.....
- 195-A.....
- 196-A.....
- 197-A.....
- 198-A.....
- 199-A.....
- 200-A.....